


# Operation Manual

Bently Nevada™ Asset Condition Monitoring

---

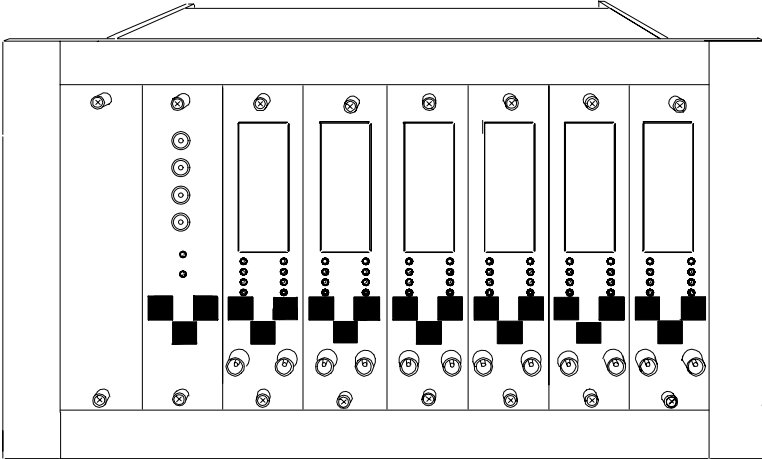

## 3300 System Overview

**Copyright © 1987. Bently Nevada LLC.  
All rights reserved.**

The information contained in this document is subject to change without notice.

The following are trademarks of General Electric Company in the United States and other countries:

Bently Nevada, Keyphasor, Proximitor

## **Contact Information**

The following ways of contacting Bently Nevada are provided for those times when you cannot contact your local representative:

Mailing Address	1631 Bently Parkway South Minden, Nevada USA 89423 USA
Telephone	1.775.782.3611 1.800.227.5514
Fax	1.775.215.2873
Internet	<a href="http://www.ge-energy.com/bently">www.ge-energy.com/bently</a>

---

# Additional Information

---

**Notice:**

This manual does not contain all the information required to operate and maintain the product. Refer to the following manuals for other required information.

**3300 System Installation Instructions (Part Number 80172-01)**

**3300 System Troubleshooting (Part Number 80173-01)**

**3300/12 AC Power Supply (Part Number 89602-01)**

**3300/03 System Monitor (Part Number 89604-01)**

**Product Disposal Statement**

 
Customers and third parties, who are not member states of the European Union, who are in control of the product at the end of its life or at the end of its use, are solely responsible for the proper disposal of the product. No person, firm, corporation, association or agency that is in control of product shall dispose of it in a manner that is in violation of any applicable federal, state, local or international law. Bently Nevada LLC is not responsible for the disposal of the product at the end of its life or at the end of its use.

**Symbols**


Special symbols are used in the manual to illustrate specifics in the step-by-step process. For example:




**PRESS**




**FLASHING**

 


**CONNECT**

 

**DISCONNECT**

 

**OBSERVE**

 


**SCREWDRIVER**

# Contents


---

- 1. SYSTEM OVERVIEW ..... 1
- 2. SYSTEM BLOCK DIAGRAM ..... 2
- 3. RACK..... 3


# 1. SYSTEM OVERVIEW

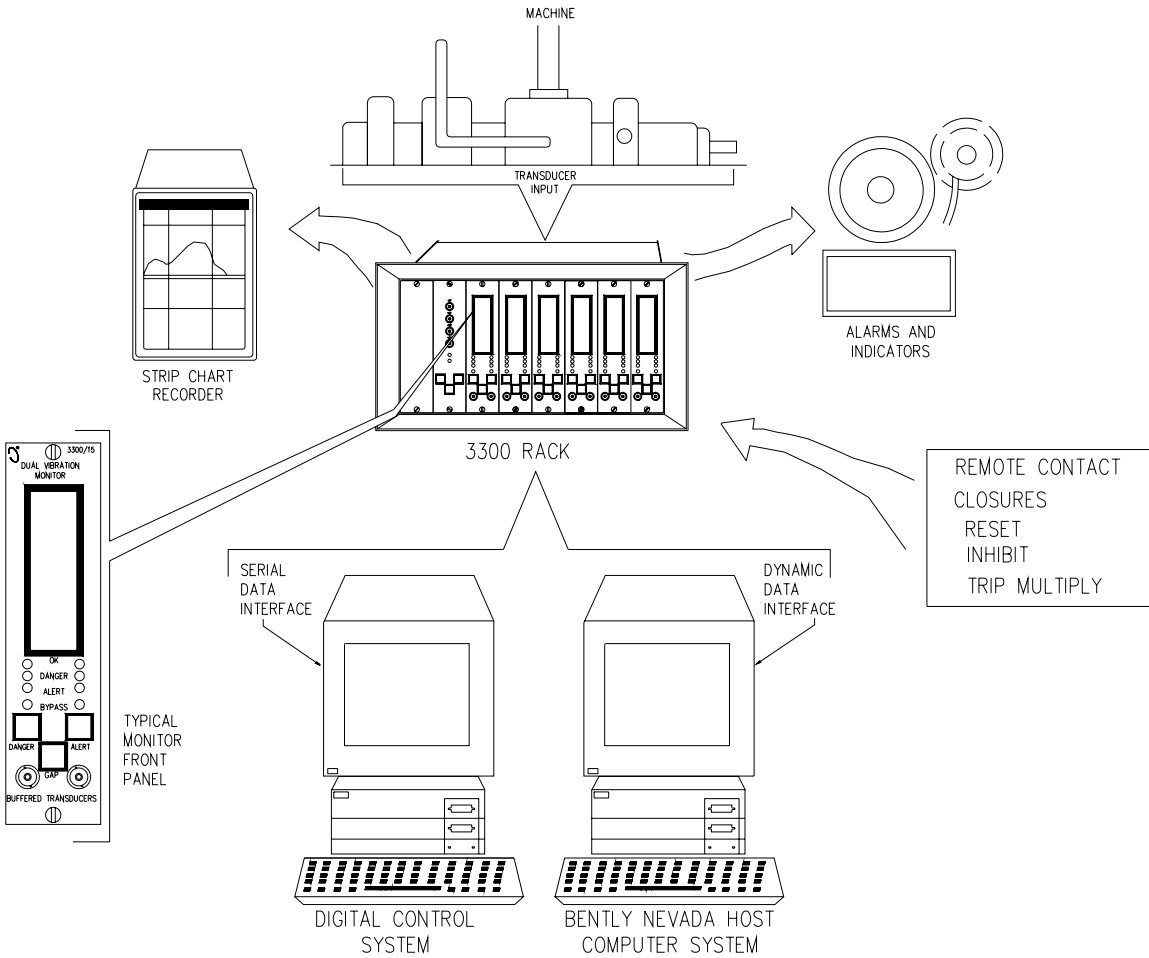


## 2. SYSTEM BLOCK DIAGRAM

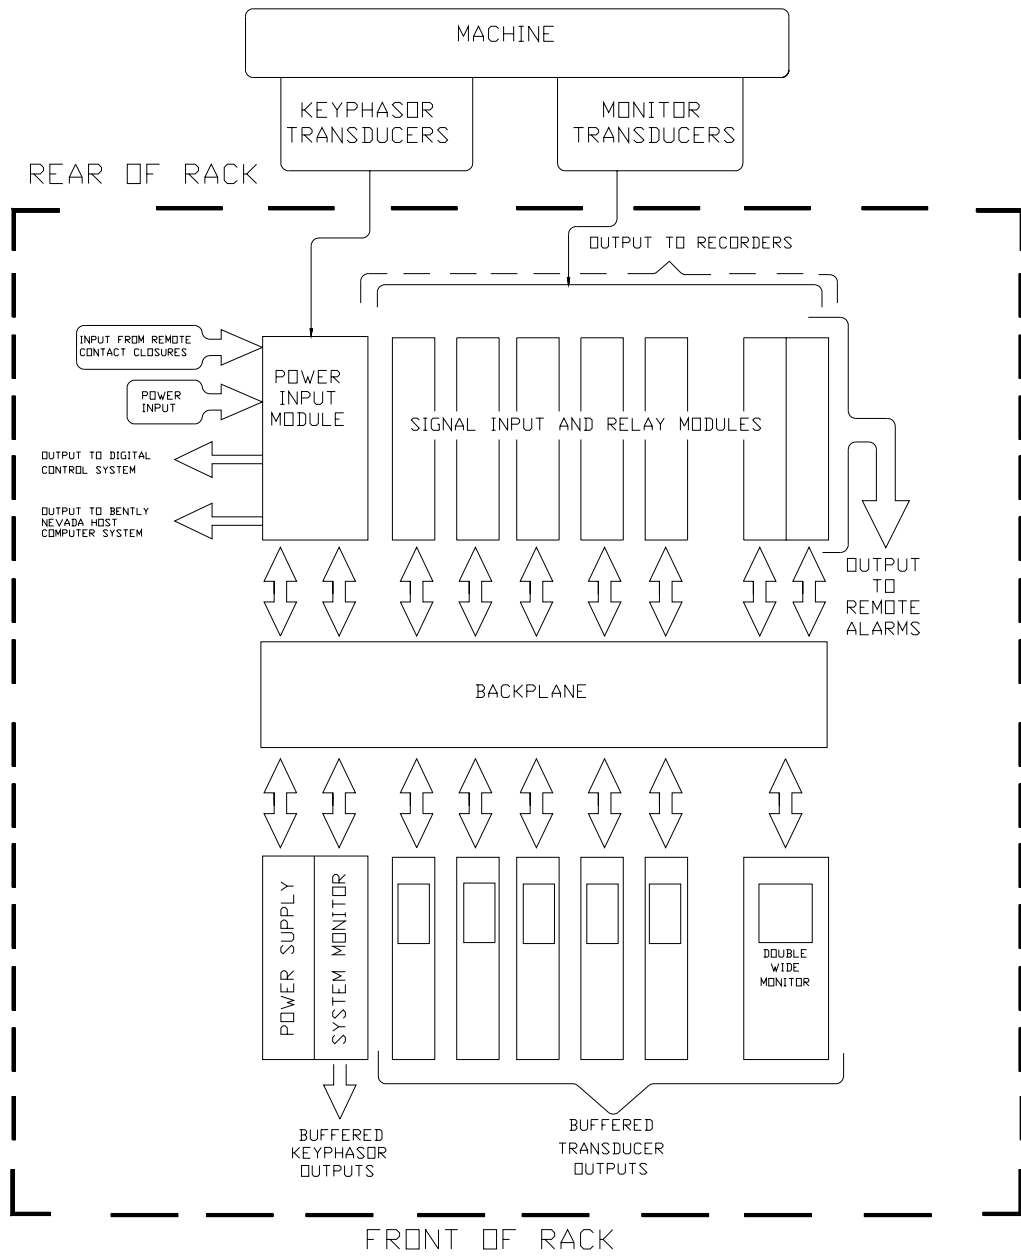

# 3. RACK

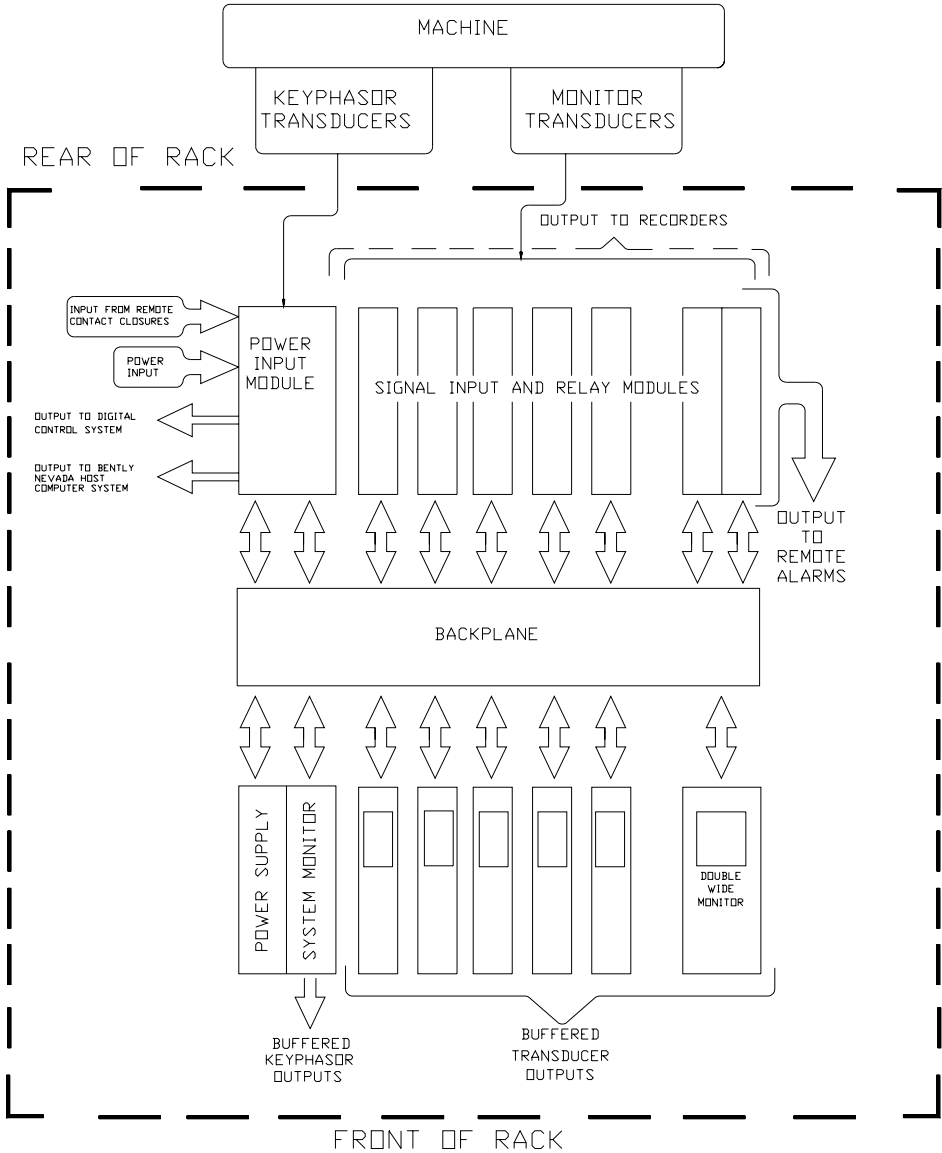

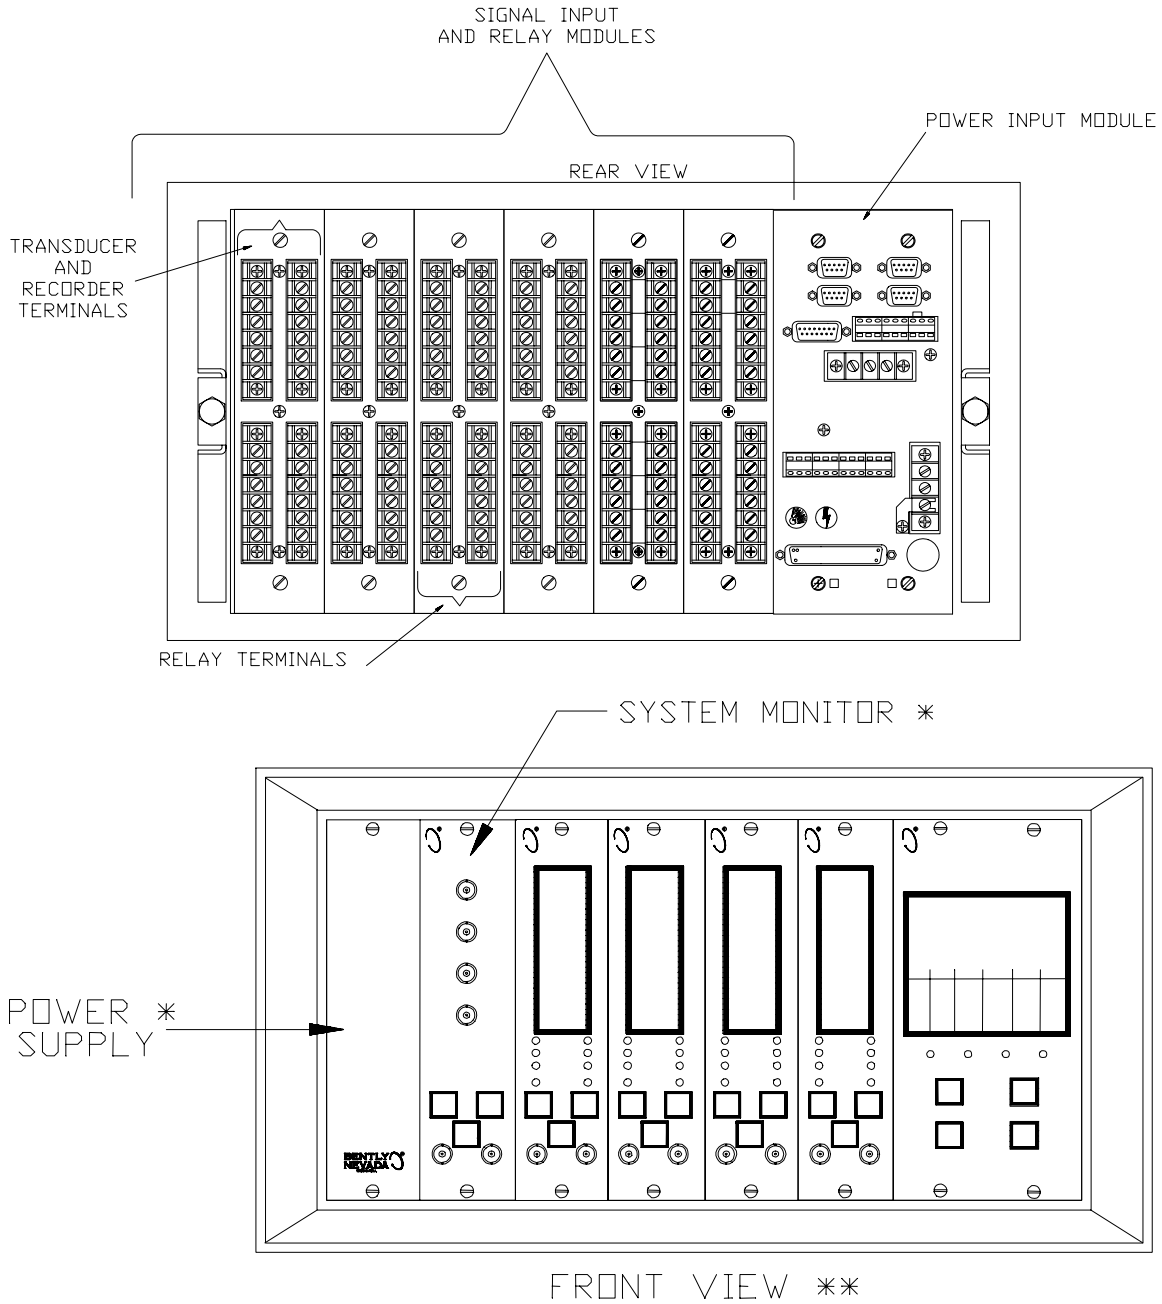

\*Power Supply and System Monitor positions are permanent and non-interchangeable.  
\*\* Monitor positions in rack are interchangeable and determined by customer requirements.